



bromicplumbing.com

ASSEMBLY

1. Use only with propane or MAP-Pro™ gas cylinders.
2. Turn valve control knob fully clockwise to OFF position.
3. Hold cylinder upright, and screw it into the valve until it is fully seated and hand tight.
4. Leak test connection to cylinder before use. Do not check for gas leaks with a match or open flame. Apply soapy water at cylinder connection. If bubbles appear disconnect cylinder.
5. Make sure the grip does not cover the air holes. If so, slide the grip away to expose the air holes prior to use.

WARNING

KEEP OUT OF CHILDREN'S REACH



Piezo Ignition



Adjustable
Flame Knob

LIGHTING AND OPERATION

1. Turn valve control knob $\frac{1}{4}$ to $\frac{1}{2}$ turn counterclockwise to open the valve.
2. Depress the auto-start button to light. If the torch does not light right away, depress the auto-start button again.

TO USE

1. Inspect torch before each use. Do not use if torch malfunctions or is damaged.
2. Hold torch by the handle at the curved part of the tube.
3. Sweep burner tip back and forth over target area, keeping the flame about 2" above the ground.
4. SHUT OFF TORCH BEFORE SETTING DOWN.

TO SHUT OFF

1. Turn the valve control knob fully clockwise to OFF position.
2. Wait for flame to extinguish.
3. Set torch down on non-combustible surface and let cool, tip will remain hot for several minutes after torch is shut off.

STORAGE

1. Turn valve control knob clockwise to the OFF position. Do not force.
2. When torch is cool, disconnect cylinder and store torch and cylinder separately. Keep out of reach of children. Observe warnings on cylinder label.
3. Do not expose cylinders to temperatures in excess of 49°C.
4. Store cylinders in well ventilated areas.

Part No. 1811850-1

BROMIC PTY LTD

10 Phiney Place, Ingleburn,
NSW 2565 Australia
Telephone: 1300 276 642
plumbing@bromic.com
bromicplumbing.com



9 320688 219091