

AIR ADMITTANCE VALVE WITH ADAPTOR FOR 32-40-50MM (1210701)

TECHNICAL DATA

Airflow Capacity – 10.1 l/s

Includes adaptor to fit 32mm, 40mm and 50mm discharge pipes

WaterMark certified to AS/NZS 4936 WM040105

Vents up to 172 fixture units for discharge pipes and 10 fixture units for discharge stacks




INSTALLATION INSTRUCTIONS

GENERAL GUIDANCE

- Installed according to AS/NZS 3500.2.
- All valves must be installed in an upright position at least 200mm above the last wet inlet connection.
- Ensure that there is at least 200mm clearance above the valve when installed to allow access for inspection, maintenance, test and if necessary, replacement.
- Airtightness tested at: 10kPa.
- Range of temperature: -20°C to +60°C.

INSTRUCTION FOR 32, 40 & 50MM SOLVENT

1. Remove from bag.
2. Select appropriate adaptor to fit pipe.
3. Ensure that the end of the pipe and the socket on the valve are clean.
4. Apply solvent cement to both the pipe and inside of the socket.
5. Position valve on pipe, pushing fully home, rotating slightly.
6. Remove excess solvent from joint as necessary.

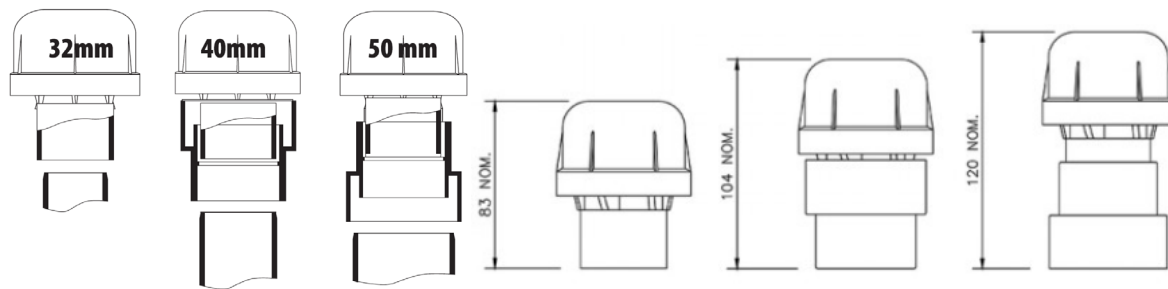

FAQS

Is the air admittance valve UV rated? No, it is intended for in cupboard use, not on roofs.

END TECHNICAL DATA SHEET