

# **AIR ADMITTANCE VALVE WITH ADAPTOR FOR 32-40-50MM**

(Item Number: 1210701)

## **TECHNICAL DATA**

- Airflow Capacity 10.1 l/s
- Includes adaptor to fit 32mm, 40mm and 50mm discharge pipes
- WaterMark certified to AS/NZS 4936 WM040105
- Vents up to 172 fixture units for discharge pipes and 10 fixture units for discharge stacks




## **INSTALLATION INSTRUCTIONS**

#### **GENERAL GUIDANCE**

- Installed according to AS/NZS 3500.2.
- All valves must be installed in an upright position at least 200mm above the last wet inlet connection.
- Ensure that there is at least 200mm clearance above the valve when installed to allow access for inspection, maintenance, test and if necessary, replacement.
- Airtightness tested at: 10kPa.
- Range of temperature: -20°C to +60°C.

### INSTRUCTION FOR 32, 40 & 50MM SOLVENT

- 1. Remove from bag.
- 2. Select appropriate adaptor to fit pipe.
- 3. Ensure that the end of the pipe and the socket on the valve are clean.
- 4. Apply solvent cement to both the pipe and inside of the socket.
- 5. Position valve on pipe, pushing fully home, rotating slightly.
- 6. Remove excess solvent from joint as necessary.

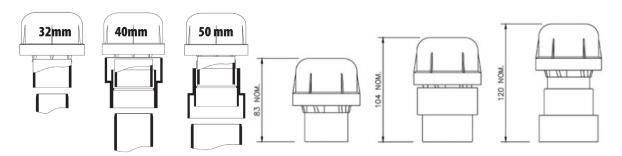

## FAQS

Is the air admittance valve UV rated? No, it is intended for in cupboard use, not on roofs.

END TECHNICAL DATA SHEET